# **On-Camera Field HD Monitor**

7Inch high resolution monitor



# Operation Manual

#### Dear users:

Thank you for purchasing our On-Camera Field HD Monitor Kit.

This 7" Pro HD Monitor is designed to be used as an external video display, allowing you to step back from the camera while still being able to frame and capture the action without having to look through the cameras built-in viewfinder. This monitor is light weight, low power consumption and low cost make it ideal to use with any Pro Video Camera, DSLR, DV and HD Video Camera. With HDMI, Component, Composite Video and Audio Input, Video Output, and optional HDMI Output.

#### **Product Advanced Features:**

1024\*600pixels, max 1920×1080 pixels

**Peaking Filter(Focus Assist)** 

Canon 5D Mark II Camera Mode(Full Screen Display, NO delay)

16:9 or 4:3 Aspect Ratio Setting

Check Field (Red, Green, Blue, Mono, Color)

**Under Scan Mode.** 

Center Marker, Screen Markers(80%,85%,90%,93%,96%).

Brightness, Contrast, Hue, Saturation and Color Temperature Adjustment Support different kinds of Batteries (Sony F970, Canon E6, Panasonic D28S,

Sony V-mount, Panasonic Anton)

High Contrast & Dizzy-proof monitor with sun shade, to see clearly under sunshine



# To ensure the best use of this product, please read this

## manual carefully beforehand.

## **CAUTION**


- 1. Please use the adapter attached in the accessory, if necessary, please use qualified adapter.
- 2. Please do NOT expose this product to direct sunlight, heat, or humid conditions.
- 3. Please keep away from strong light while using this product to ensure the image effect and long-term use.
- 4. Please avoid heavy impact or drop onto the ground.
- 5. Please do NOT use chemical solutions to clean this product. Please wipe with a clean soft cloth to maintain the brightness of the surface.
- 6. Without adjustable component in the unit, please do not take apart or repair the unit by yourself, to avoid damage the product.

#### **CONTENTS**

1.	Product description	4
	• Front view	4
	Back view	5
	Bottom view	6
	Battery Plate	6
2.	Power input way	7
3.	Operating instructions	10
	Panel shortcut button function instruction	10
	Menu operating instruction	11
4.	Parameters	15
5.	Accessories	16
6.	Trouble shooting	17
7.	Remark	17

#### 1. Product description


#### Front view

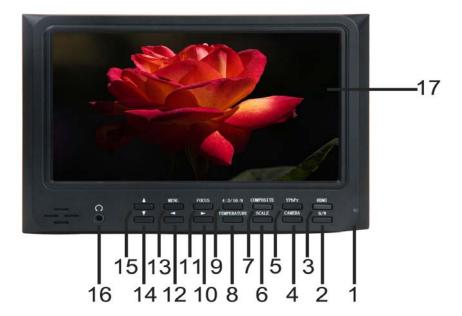

- 1. Power Indicator Light: Light turns red when standby, green when working
- 2. **B/W**: Switch on/off Check Field (Red Green Blue Monochromatic and Color)
- 3. **HDMI**: High definition signal input selection button
- 4. CAMERA: Canon 5D II Camera Mode
- 5. **YPbPr**: YPbPr signal input selection button
- 6. MARKER: Screen Marker
- 7. **VIDEO:** Composite video signal input selection button
- 8. **COLOR TEMP**: Color temperature selection
- 9. **4:3/16:9**: Use to switch between 4:3 and 16:9 aspect ratio
- 10. ▶ : Function confirmation or value up while using menu setting functions
- 11. Focus: Click to switch ON/ OFF Peaking Filter(Focus Assist)Mode
- 12. ◀ : Function confirmation or value down while using menu setting functions, and Switch on/off Center Marker
  - 13. MENU: To activate OSD (on-screen display) menu
- 14. ▲: Menu item value up adjustment button. No Menu State to cycle adjust the 5 level brightness
  - 15. ▼: Menu item value down adjustment button

- 16. **∩**: Earphone Jack
- 17. Display Screen

#### Back view:

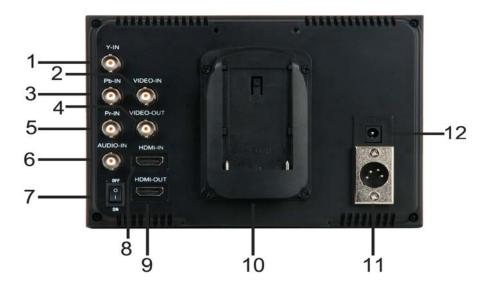

- 1. Y-IN: Y signal input
- 2. VIDEO-IN: Video signal input
- 3. Pb-IN: Pb signal input
- 4. VIDEO-OUT: Video signal output
- 5. Pr-IN: Pr signal input
- 6. AUDIO-IN: Audio signal input
- 7. Power ON/OFF Switch
- 8. HDMI-IN: HDMI(High Definition Multimedia Interface) signal input
- 9. HDMI-OUT: HDMI(High Definition Multimedia Interface) signal output(Optional)
  - 10. Battery Plate slot(According to the users' requirements selection)-see attached instruction
  - 11. 4-pin XLR DC power input
  - 12. DC power input interface

## Bottom view



Use the ¼ inch Thread Mounting hole to attach the monitor to a camera or variety of mounting devices.

# Battery Plate:



According to the different requirements of battery for the customers, attached

different batteries plate slot.

a. Sony F970 battery slot for battery of Panasonic DV:

F970/F960 F950 T930 F770 T750 F730 F570 F550 F530 QM91D OM91 QM90D QM90 QM71D QM71 QM70D QM70 QM51D QM51 FM71 FM70 serial

**b.** Canon LP-E6 battery slot for battery of Canon DV:

Canon LP-06

c. Panasonic D28 battery slot for battery of Panasonic DV:

D55 554S D54SE D40 D35 D33 D32 D28 D25 D22 serial

- d. Sony V-mount camera battery Plate
- e. Panasonic Anton Bauer battery Plate

Picture: Three types of batteries corresponding to the upper three slots



**Remark:** Different specifications of the battery, capability is different. The working time for the monitor will be different. Higher capability (working time) will be longer.

## 2. Power input way

There are some ways to supply the power of the monitor.

1.The power supply by the adapter. 12V/1.0A is optional DC voltage changer, insert DC power input interface directly. It can be choosed qualified adapter which current with output voltage DC  $6\sim$ 15V, output capacity >10W by customers


Please note that the polarity of power input is inner POSITIVE, outer NEGATIVE. Otherwise will damage the product. (see attached image)



Please use the adapter attached in the accessories. If necessary to use other specifications adapter, please note to provide the qualified adapter which power supply should be not less than 10W (DC6V-24V)

2. Another option of power source is using batteries. The product back case including battery slot is available for three types of batteries. Customers can choose different battery slots according to their needs.

#### Battery install way as below picture

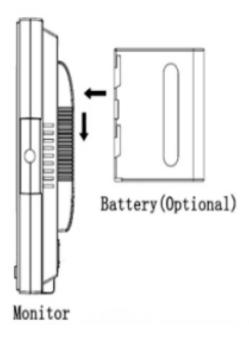

Suggestion: Better remove the battery for long-term NO use this product.

Different specifications of the battery, capability is different. The working time

for the monitor will be different. Higher capability (working time) will be longer.

Without design charging circuit for the monitor, please remove the battery to the battery charger for charge.


3. This product also can be by 4-Pin XLD interface to use the power supplied from camera.

Pin Number	Signal
1	GND
2-3	NC
4	+12V
-	20 10
	30 <sub>40</sub> 3

Operating instruction (When operating, the monitor should be power on in the working state)

## 3. Operating instructions

#### Panel shortcut button function operation:

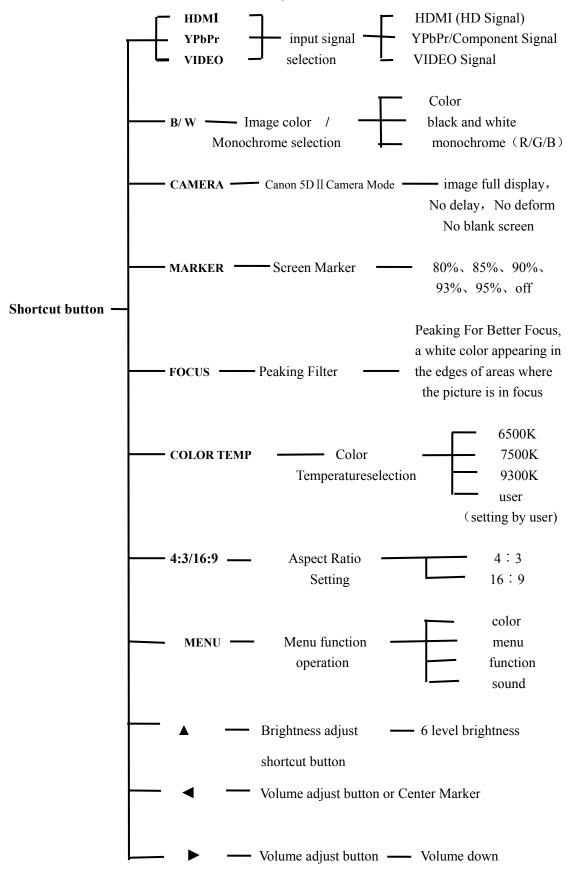


#### Menu operating instructions

Before setting the menu functions, please make sure the device is connected correctly. Power switch(lower right corner of the unit) dial to ON position. The monitor enter into working state. Please dial to OFF position when need to close the unit. After enter into working state, press the "mode" button on the unit, according to the input video signal to switch"HDMI、YPbPr、VIDEO" (under NO menu state, using the shortcut button on the panel to operate). Press "MENU" button on the unit, then enter into OSD menu operation. Operate "\(^{\text{"or"}}\)\(^{\text{"on the unit to select or adjust the needed options.}\)\(\text{\text{(color)}}\)\((\text{color})\)\

# • (color)

Enter into "Color" OSD, press ◀"or"▶"button to confirm, then enter to adjust the color parameters, use ""▲"or"▼"to select adjustment item, then use"◀"or"▶"adjust the parameters.

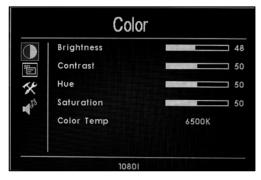


\* Brightness: To adjust the image's brightness.


※ Contrast: To adjust the brightest and darkest ratio of the image, please note the sense of picture when adjust, proportion too large or small, will make the picture lose the color of showy.

\*\*Tint: On NTSC Video mode, the image color tint difference is adjustable by tint.

**X** Saturation: To adjust color concentration

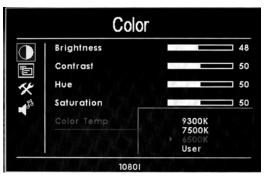


When select "USER", use "▲"or"▼" to select color R、G、B, then use "◄"or"▶" to adjust the value of Analog Data, to make sure the color of picture meets need.

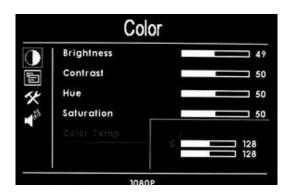

# • 🛅 (OSD)

After select "OSD" function, press "◄"or"▶" button to confirm, then enter into parameters adjust. Using "▲"or"▼" button to select optional items, then using ""◄"or"▶" button to adjust the parameters.

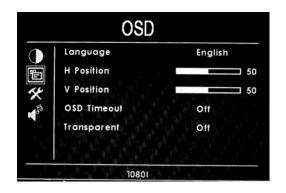

X Language: Languages for OSD as below:

English 简体中文 Italians Francois


Deutsch Español 繁体中文 Japanese Pycc



- H Position: To adjust the OSD position in horizontal.
- X V Position: To adjust the OSD position in vertical.
- **X** OSD Timeout: To adjust the clock.
- X Transparent: To adjust the level of transparent.

# ● 【 (Function)

After select "function", press " ◀ "or "▶" button to confirm, then enter into parameters adjust. Using ▲ "or "▼" button to select adjustable items, then using " ◀ "or "▶" button to adjust the parameters.

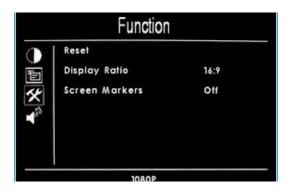

\* Reset: Back to original setting.

Display Ratio: To change the display ratio 16:9/4:3.

**X** Screen Marker: (80%、85%、90%、93%、95%)

# • Karana (Sound)

After select "menu" function, press "◀" or "▶" button to confirm.

Then enter into parameters adjust. Use "♠" or "▼" to select adjustable options, then use "◀" or "▶" adjust specific parameters



X Volume: To adjust the volume.

# 4. Parameters

Display panel size	TFT LCD 7.0inch 1843200 Pixels
Panel type	TFT LCD
Resolution	1024*600
Max resolution	1920×1440
Horizontal frequency range	30-60kHz
Field frequency range	60Hz ∼ 75Hz
Dot Pitch	0.05(W) x 0.15 (H)
Display ratio	16:9
Brightness	250 cd/m²
Contrast	700:1
Response time	10ms
Viewing Angle	75°/75°(L/R),70°/75° (U/D)
Backlight	LED
Input Signal	HDMI, YPbPr, Video, Audio
HDMI & YPbPr Support Format	480i, 480p, 576i, 576p, 720p, 1080i(50/60),
	1080P(50/60)
Video color system	PAL-4.43; NTSC-3.58
Speaker output power	≥1W/8Ω
Signal output	Video, HDMI(optional)
Input power voltage range	DC6-24V(XLR DC Connection)
Power consumption	≤6w
Standby current	≤50mA
Unit size	188.5(L)mm X 134(W)mm X 42.5(H)mm
Weight	469g
Working temperature	<b>−20~55</b> °C
Storage temperature	_30~65°C

# 5. Accessories

## 1. Standard

HDMI cable(HDMI to Mini HDMI)	1pcs
Sun shade	1pcs
Hot shoe mount	1pcs
F970 battery Plate	1pcs
User manual	1pcs

# 2. Optional

Battery	1pcs
BNC to RCA adapter	6pcs
BNC cable	6pcs
DC 12V power adapter	1pcs
Canon LP-E6 battery Plate	1pcs
Panasonic D28 series battery Plate	1pcs
Sony V-mount battery Plate	1pcs
Panasonic Anton Bauer Plate	1pcs



HDMI cable



Hot shoe mount



Sun shade



User manual



Power adapter (optional)



BNC to RCA adapter (optional)



BNC cable (optional)



Battery (optional)

#### 6. Trouble shooting

1. Only black and white or monochrome picture.

Please check saturation brightness & contrast adjustment.

Confirm B/W button whether in black and white or monochrome state.

2. NO picture after put on the power.

Check signal cable connecting, make sure use the standard adapter connect the monitor. If power supply by battery, please check the battery whether fully charged.

3. The image color distortion or abnormal, eg. lack some color.

Please check signal cable whether connect correctly or not. The cable damage or loose will cause poor transfer, then above malfunction will happen.

Check "color" function menu "color temperature" adjustment, whether adjustment misconduct under the "user" state

4. If there exists an abnormal phenomenon, please try to enter into OSD menu select "reset" to reset.

#### ■ Remark:

If there are still other problems, please contact with our related deals.

\* If there are changes without prior notice.